Zero Turn Broadcast Spreader

If your Zero Turn Mower is already equipped with our step lift mount, these are the only parts of the step lift you will need for this application. The Step Pedal is not needed for use with the broadcast spreader.

1ea. feed bin, 2ea. feed bin supports, 1ea. wheel assembly, 1ea. feed gate, 1ea. pulley, 1ea. agitator, 1ea. support frame, 1ea. o-belt, 1ea. fan, 1ea. operating rod, 1ea. feed rate slide 2ea. 5/16 x 3 bolts, 4ea. 5/16 flat washers, 4ea. 5/16 lock washers, 2ea. 5/16 nuts, 1ea. 5/16 x 2 bolt, 1ea. 5/16 wingnut, 1ea. 5/16 spacer, 2ea. 1/4 x 3/4 bolts, 2ea. 1/4 nuts, 2ea. 1/4 x 3/4 teck screws, 2ea. 1/8 cotter pins, 2ea. 3/32 cotter pins.

Slide the main U-mount frame upward into the step-lift mount and lightly tighten.

Slide wheel assembly into support frame and slide support frame onto step lift mount as shown.

Slide pulley onto shaft and tighten set screw against the flat spot on the shaft. Slip o-belt over both pulleys.

Attach feed bin support to main frame using 2 ea. 5/16 x 3 bolts, nuts and washers.

* DO NOT TIGHTEN *

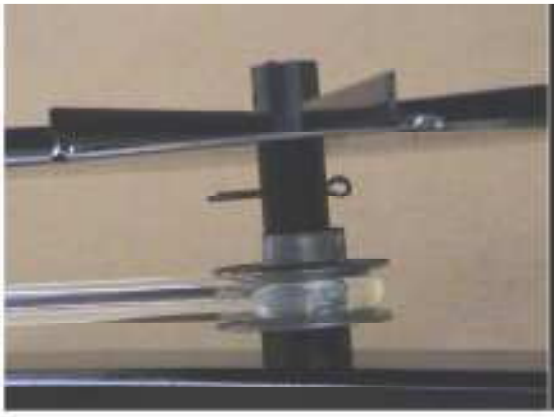

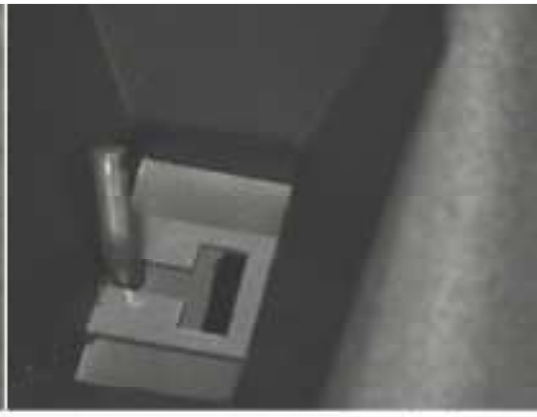

Attach fan using 1/8" (large) cotter pin to shaft.

Slide feed rate door into feeder bin with the small hole toward the Zero Turn Mower.

Insert agitator into hole in the bottom of the feed bin. Secure using 1/8" (large) cotter pin into the top of the spreader fan. Now, tighten the 2 bolts securing feed bin support to the main frame.

CMI Country Manufacturing, Inc.
P.O. Box 104 333 Salem Avenue
Fredericktown, Ohio 43019
Phone: (740) 694-9926
Fax: (740) 694-5088
Web Site: www.countrymanufacturing.com

Zero Turn Broadcast Spreader

Insert feed bag supports into feeder frame.
(make sure the supports are in as far as possible)

Pull feed bag up and loop the folds outside of the support frames, secure with the velcro strips attached to the feed bag.

Attach operating rod through hole in Main Frame and secure to feed rate lever using 3/32" (small) cotter pin.

Attach operating rod to the small hole in the feed rate door using 3/32" (small) cotter pin.

Attach feed rate lever stop to frame mounts using provided screws and nuts. Affix calibration sticker to the top of the feed rate lever guide.

Adjust the mount support with the main spreader frame setting level to the ground.

Attach o-belt guard to frame support using 2 teks screws.

Country Manufacturing, Inc.
P.O. Box 104 333 Salem Avenue
Fredericktown, Ohio 43019
Phone: (740) 694-9926
Fax: (740) 694-5088
Web Site: www.countrymanufacturing.com